

**PowerXL™**

DE1 Variable Speed Starter

Access to Parameter Level 2 – Parameter Lock – Load Default



Level 2	<p>1 – Fundamental – No previous experience necessary</p> <p>2 – Basic – Basic knowledge recommended</p> <p>3 – Advanced – Reasonable knowledge required</p> <p>4 – Expert – Good experience recommended</p>
---------	--

## Contents

Danger! - Dangerous electrical voltage!.....	<b>Fehler! Textmarke nicht definiert.</b>
Disclaimer .....	4
General .....	5
Level 2 (Extended Menu + Monitor) .....	6
Password (P-14).....	6
Password Level2 (P-37) .....	6
Access to level 2 .....	6
Quit level 2 .....	7
Change „Password Level2“ .....	7
Parameter Lock.....	8
Parameter Lock (P-38).....	8
Lock parameters.....	8
Unlock parameters .....	8
Restore Default Settings.....	9

## Danger! - Dangerous electrical voltage!

- Disconnect the power supply of the device.
- Ensure that devices cannot be accidentally restarted.
- Verify isolation from the supply.
- Cover or enclose any adjacent live components.
- Follow the engineering instructions (AWA/IL) for the device concerned.
- Only suitably qualified personnel in accordance with EN 50110-1/-2 (VDE 0105 Part 100) may work on this device/system.
- Before installation and before touching the device ensure that you are free of electrostatic charge.
- The functional earth (FE, PES) must be connected to the protective earth (PE) or the potential equalization. The system installer is responsible for implementing this connection.
- Connecting cables and signal lines should be installed so that inductive or capacitive interference does not impair the automatic control functions.
- Suitable safety hardware and software measures should be implemented for the I/O interface so that an open circuit on the signal side does not result in undefined states.
- Deviations of the mains voltage from the rated value must not exceed the tolerance limits given in the specification, otherwise this may cause malfunction and/or dangerous operation.
- Emergency stop devices complying with IEC/EN 60204-1 must be effective in all operating modes. Unlatching of the emergency-stop devices must not cause a restart.
- Devices that are designed for mounting in housings or control cabinets must only be operated and controlled after they have been properly installed and with the housing closed.
- Wherever faults may cause injury or material damage, external measures must be implemented to ensure a safe operating state in the event of a fault or malfunction (e.g. by means of separate limit switches, mechanical interlocks etc.).
- Variable speed starters may have hot surfaces during and immediately after operation.
- Removal of the required covers, improper installation or incorrect operation of motor or variable speed starter may destroy the device and may lead to serious injury or damage.
- The applicable national safety regulations and accident prevention recommendations must be applied to all work carried on live variable speed starters.
- The electrical installation must be carried out in accordance with the relevant electrical regulations (e. g. with regard to cable cross sections, fuses, PE).
- Transport, installation, commissioning and maintenance work must be carried out only by qualified personnel (IEC 60364, HD 384 and national occupational safety regulations).
- Installations containing variable speed starters must be provided with additional monitoring and protective devices in accordance with the applicable safety regulations. Modifications to the variable speed starters using the operating software are permitted.
- All covers and doors must be kept closed during operation.
- To reduce the hazards for people or equipment, the user must include in the machine design measures that restrict the consequences of a malfunction or failure of the variable speed starter (increased motor speed or sudden standstill of motor). These measures include:
  - Other independent devices for monitoring safety related variables (speed, travel, end positions etc.).
  - Electrical or non-electrical system-wide measures (electrical or mechanical interlocks).
  - Never touch live parts or cable connections of the variable speed starter after it has been disconnected from the power supply. Due to the charge in the capacitors, these parts may still be alive after disconnection. Consider appropriate warning signs.

## Disclaimer

The information, recommendations, descriptions, and safety notations in this document are based on Eaton's experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in the applicable Terms and Conditions for Sale of Eaton or other contractual agreement between Eaton and the purchaser. THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES. As far as applicable mandatory law allows so, in no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein. The information contained in this manual is subject to change without notice.

## General

By default, variable speed starters of the series **PowerXL™ DE1** are configured in a way, that they are applicable for a plurality of applications without any change. In addition it is possible to carry out application dependent settings by changing parameter values.

The parameters are divided into two groups:

- “Basic” for the most common parameters (Level 1)
- “extended” for further parameters and “Monitor” for display values (Level 2)


This Application Note describes:

- the access to level 2
- the possibility, to prevent a change of parameter values
- how to restore the factory settings (default)

Hint: To perform the settings described in this Application Note either the optional Keypad DX-KEY-LED or the parameter software DrivesConnect is necessary.

## Level 2 (Extended Menu + Monitor)

By default only the Basic-Menu (Level 1) is accessible. It contains those parameters, which are used most. The menus “extended” and “Monitor” are not visible at a first glance. Access is possible via parameter „Password“ (P-14).

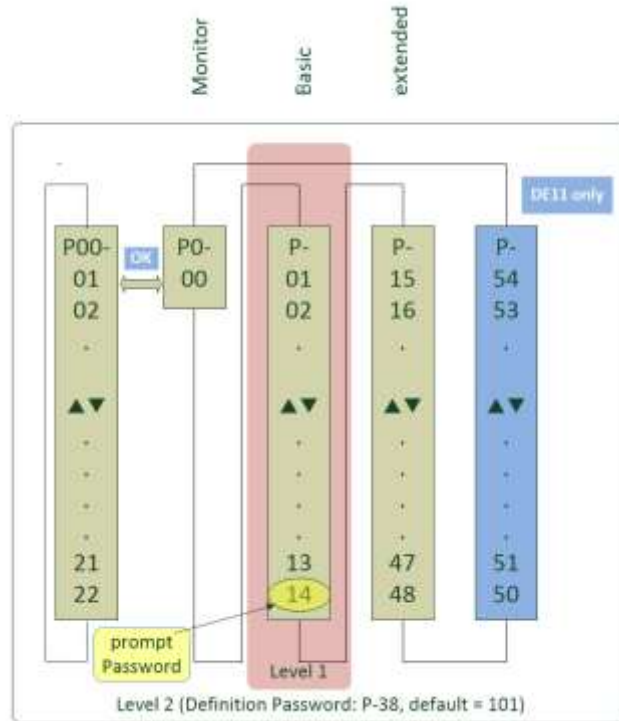

### Password (P-14)

Entering the password enables the access to the parameters of level 2 and to the display values. The prompted value must be equal to parameter P-38.

PNU	Parameter	Name	Range	Default
320.0	P-14	Password	0...9999	101

### Password Level2 (P-38)

This parameter defines the password to get access to level 2. The value of P-38 has to be prompted in P-14 (see below).

PNU	Parameter	Name	Range	Default
320.1	P-38	Password Level2	0...9999	101

### Access to level 2

- Press button **OK** for 2 s, to access the parameter level
- The display shows the parameter, which was used at last.
- Select parameter P-14 with **▲** and **▼**
- Press **OK** to change value with **▲** and **▼** to the „Password Level 2“ set with P-38. (Default: 101)
- Press **OK** to acknowledge
- Now the extended parameter set (parameters > P-14 and display values P00-...) are available.

## Quit level 2

- Set P-14 to a value, which is different from the „Password Level2“ set with P38.
- Press **OK** to acknowledge
- Only the parameters P-01 ... P-14 are accessible now.

## Change „Password Level2“

- Select P-38 (Level 2 has to be accessible, see above)
- Press **OK** to change value with ▲ and ▼
- Press **OK** to acknowledge
- When accessing level 2 next time, the new „Password Level2“ has to be prompted at P-14.

## Parameter Lock

Variable Speed Starters of the series DE1 offer the possibility to protect parameters from being changed.

### Parameter Lock (P-39)

To protect parameters from being changed, P-39 has to be set to „1“. To prevent, that any user can unlock the parameters, the access to level 2 should also be locked (see above: “Quit level 2”).

The parameter lock causes:

- that all parameters, except P-14 (Password) and P-39 (Parameter Lock), are protected against changes.
- that all parameters can be selected and their actual values are visible.
- that during an attempt of a change, this will not be accepted. In this case „L“ is shown on the left hand side of the display (= locked).

PNU	Parameter	Name	Range	Default
625.0	P-39	Parameter Lock	0 = parameters not locked 1 = parameters locked	0 = not locked

### Lock parameters

- Release extended menu with P-14 (see above: „Access to level 2“).
- Select P-39 and set it to „1“.
- Possibly change P-38 (Password Level 2), that access to level 2 cannot be achieved by using the default (known) password (see above: “Change Password Level 2”).
- Quit level 2 and lock access (see above: „Quit level 2“).

### Unlock parameters

- Release extended menu with P-14 (see above: „Access to level 2“).
- Select P-39 and set it to „0“.
- The parameters are now unlocked.



## Restore Default Settings

In some situations it can make sense to restore the factory settings. This is done with parameter P37 and can only be achieved when the drive is disabled (no START signal).

- Select P-37 in the extended menu (= Level 2, access see above)
- **OK**
- Set P-37 to "1" with ▲
- **OK**
- The display shows „P-dEF“ (Parameter default).
- Acknowledge by pressing **STOP**.
- P-37 is automatically reset to „0“