


# PowerXL™

DC1 Variable Frequency Drives  
 Dependency of the output current on switching frequency  
 and ambient temperature

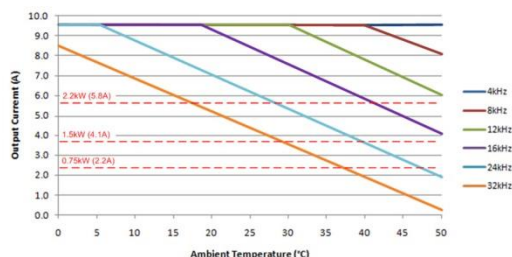

Level 3	1 – Fundamental – No previous experience necessary 2 – Basic – Basic knowledge recommended 3 – Advanced – Reasonable knowledge required 4 – Expert – Good experience recommended
---------	---

## Content

1	General .....	5
2	The temperature management of the devices DC1 .....	6
2.1	Switching Frequency (P-17), Heatsink Temperature (P00-09) .....	6
3	Current depending on switching frequency and temperature .....	7
3.1	Devices DC1 with degree of protection IP20 .....	7
3.1.1	Voltage class 230 V .....	7
3.1.2	Voltage class 400 V .....	9
3.2	Devices DC1 with degree of protection IP66 .....	11
3.2.1	Voltage class 230 V .....	11
3.2.2	Voltage class 400 V .....	13

## Danger! - Dangerous electrical voltage!

- Disconnect the power supply of the device.
- Ensure that devices cannot be accidentally restarted.
- Verify isolation from the supply.
- Cover or enclose any adjacent live components.
- Follow the engineering instructions (AWA/IL) for the device concerned.
- Only suitably qualified personnel in accordance with EN 50110-1/-2 (VDE 0105 Part 100) may work on this device/system.
- Before installation and before touching the device ensure that you are free of electrostatic charge.
- The functional earth (FE, PES) must be connected to the protective earth (PE) or the potential equalization. The system installer is responsible for implementing this connection.
- Connecting cables and signal lines should be installed so that inductive or capacitive interference does not impair the automatic control functions.
- Suitable safety hardware and software measures should be implemented for the I/O interface so that an open circuit on the signal side does not result in undefined states.
- Deviations of the mains voltage from the rated value must not exceed the tolerance limits given in the specification, otherwise this may cause malfunction and/or dangerous operation.
- Emergency stop devices complying with IEC/EN 60204-1 must be effective in all operating modes. Unlatching of the emergency-stop devices must not cause a restart.
- Devices that are designed for mounting in housings or control cabinets must only be operated and controlled after they have been properly installed and with the housing closed.
- Wherever faults may cause injury or material damage, external measures must be implemented to ensure a safe operating state in the event of a fault or malfunction (e.g. by means of separate limit switches, mechanical interlocks etc.).
- Frequency inverters may have hot surfaces during and immediately after operation.
- Removal of the required covers, improper installation or incorrect operation of motor or frequency inverter may destroy the device and may lead to serious injury or damage.
- The applicable national safety regulations and accident prevention recommendations must be applied to all work carried on live frequency inverters.
- The electrical installation must be carried out in accordance with the relevant electrical regulations (e. g. with regard to cable cross sections, fuses, PE).
- Transport, installation, commissioning and maintenance work must be carried out only by qualified personnel (IEC 60364, HD 384 and national occupational safety regulations).
- Installations containing frequency inverters must be provided with additional monitoring and protective devices in accordance with the applicable safety regulations. Modifications to the frequency inverters using the operating software are permitted.
- All covers and doors must be kept closed during operation.
- To reduce the hazards for people or equipment, the user must include in the machine design measures that restrict the consequences of a malfunction or failure of the frequency inverter (increased motor speed or sudden standstill of motor). These measures include:
  - Other independent devices for monitoring safety related variables (speed, travel, end positions etc.).
  - Electrical or non-electrical system-wide measures (electrical or mechanical interlocks).
  - Never touch live parts or cable connections of the frequency inverter after it has been disconnected from the power supply. Due to the charge in the capacitors, these parts may still be alive after disconnection. Consider appropriate warning signs.

## Disclaimer

The information, recommendations, descriptions, and safety notations in this document are based on Eaton's experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in the applicable Terms and Conditions for Sale of Eaton or other contractual agreement between Eaton and the purchaser. THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES. As far as applicable mandatory law allows so, in no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein. The information contained in this manual is subject to change without notice.

NOTE: Variable Frequency Drives of the series DC1-...**E1** are not described in this Application Note. See AP040059EN for this.

## 1 General

In the development of variable frequency drives the thermal design plays an important role. With a given hardware (power semiconductors used, heat sinks, fan yes/no...) a reliable operation basically depends on three factors:

- the motor current
- the switching frequency in the power section
- the ambient temperature

In the technical data sheets one can find rating values, which correspond to a certain combination of the values above. In addition there is a possibility to use other combinations in an application. For example you can increase the switching frequency to reduce the noise, which is generated by switching the semiconductors in the power section. At the same time higher switching frequencies lead to increased losses. One can compensate these by reducing the current to make sure, that the thermal aspect is in balance. In some cases it may be necessary to select a variable frequency drive with a higher rating.

This application note describes the dependency of a possible output current on switching frequency and ambient temperature.

Some required parameters are inside Level 2 of the menu. This level has to be activated by prompting the „Password Level2“ (P-37) into P-14 (Password). Password Level2 is „101“ by default.

## 2 The temperature management of the devices DC1

The most important parameter for a thermal balance is the heatsink temperature. The temperature is displayed with P00-09. The devices of the series DC1 have an internal temperature management, which reduces the switching frequency automatically in case of too high temperature. Hereby the likelihood of an overtemperature trip is minimized.

Reasons for an excessive temperature could be:

- wrong selection of the variable frequency drive
- wrong mounting (cooling air cannot circulate properly)
- temporary increase of the ambient temperature e.g. on hot summer days
- breakdown of the cooling fan
- pollution of the heatsink

The table below shows the respective measures depending on the heat sink temperature (not ambient temperature!)

Heatsink temperature	Measure
70 °C	Automatic reduction of the switching frequency from 32 kHz to 24 kHz
75 °C	Automatic reduction of the switching frequency from 24 kHz to 16 kHz
80 °C	Automatic reduction of the switching frequency from 16 kHz to 12 kHz
85 °C	Automatic reduction of the switching frequency from 12 kHz to 8 kHz
90 °C	Automatic reduction of the switching frequency from 8 kHz to 4 kHz
97 °C	Overtemperature trip $\square$ -t

### 2.1 Switching Frequency (P-17), Heatsink Temperature (P00-09)

PNU	Parameter	Name	Range	Default
390.0	P-17	Switching Frequency	0: 4 kHz 1: 8 kHz 2: 12 kHz 3: 16 kHz 4: 24 kHz 5: 32 kHz	f (I <sub>e</sub> )
822.0	P00-09	Heatsink Temperature	-29 ... +100 °C	-

Hint: the maximum switching frequency depends on the device type



### 3 Current depending on switching frequency and temperature


The following tables are splitted according the degree of protection (IP...), the mains voltage and the frame size (FS). As a voltage the so called “voltage class” is shown.

- 230 V → 200 V – 10 % ... 240 V +10 % (values are true for single phase as well as for three phase supply)
- 400 V → 380 V – 10 % ... 480 V + 10 %

#### 3.1 Devices DC1 with degree of protection IP20



##### 3.1.1 Voltage class 230 V

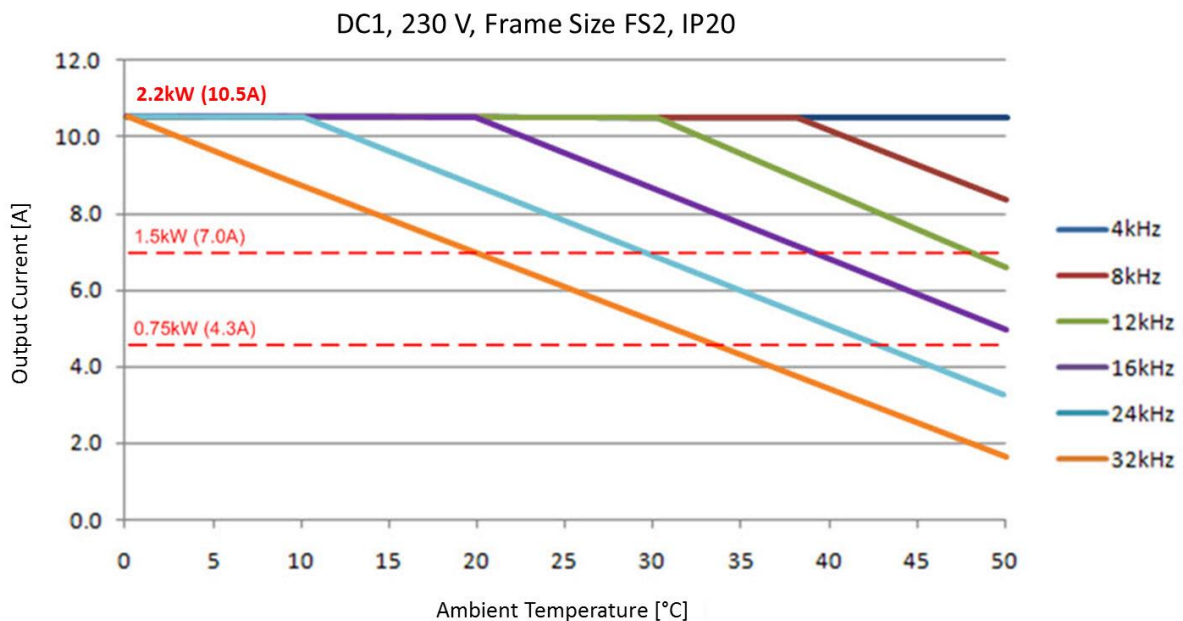
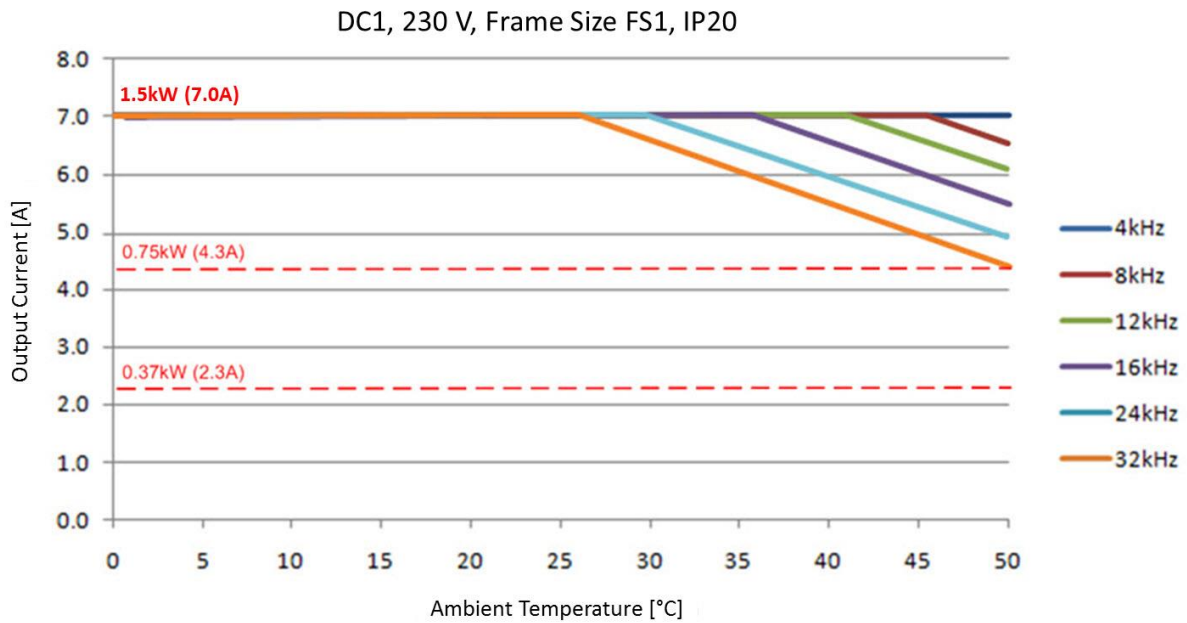


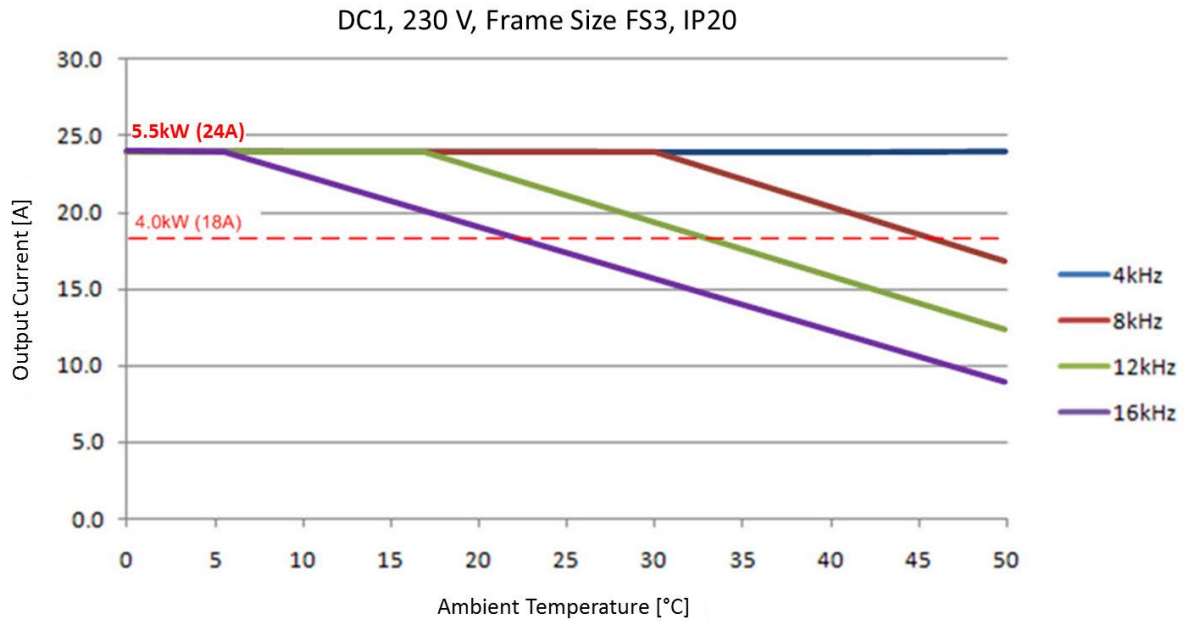





### 3.1.2 Voltage class 400 V

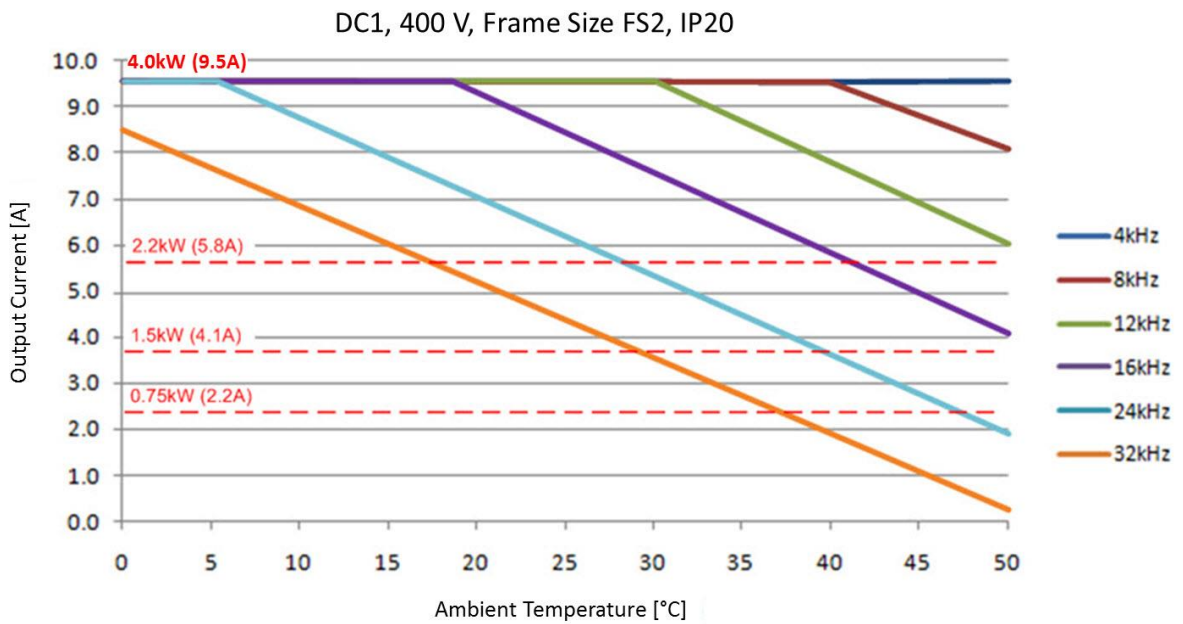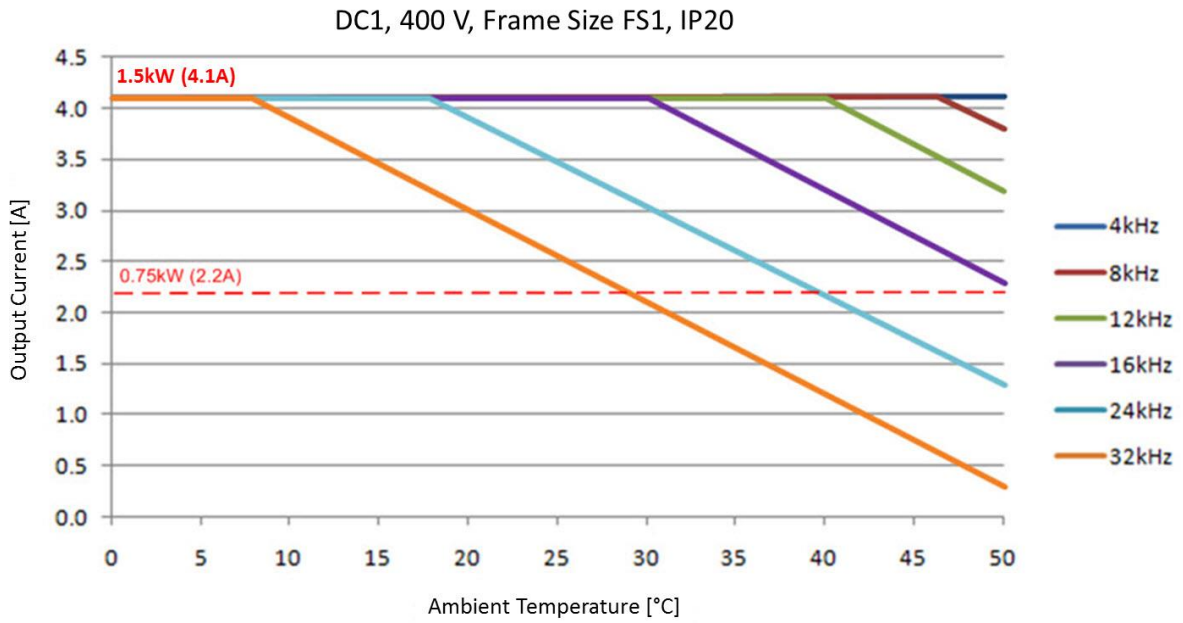


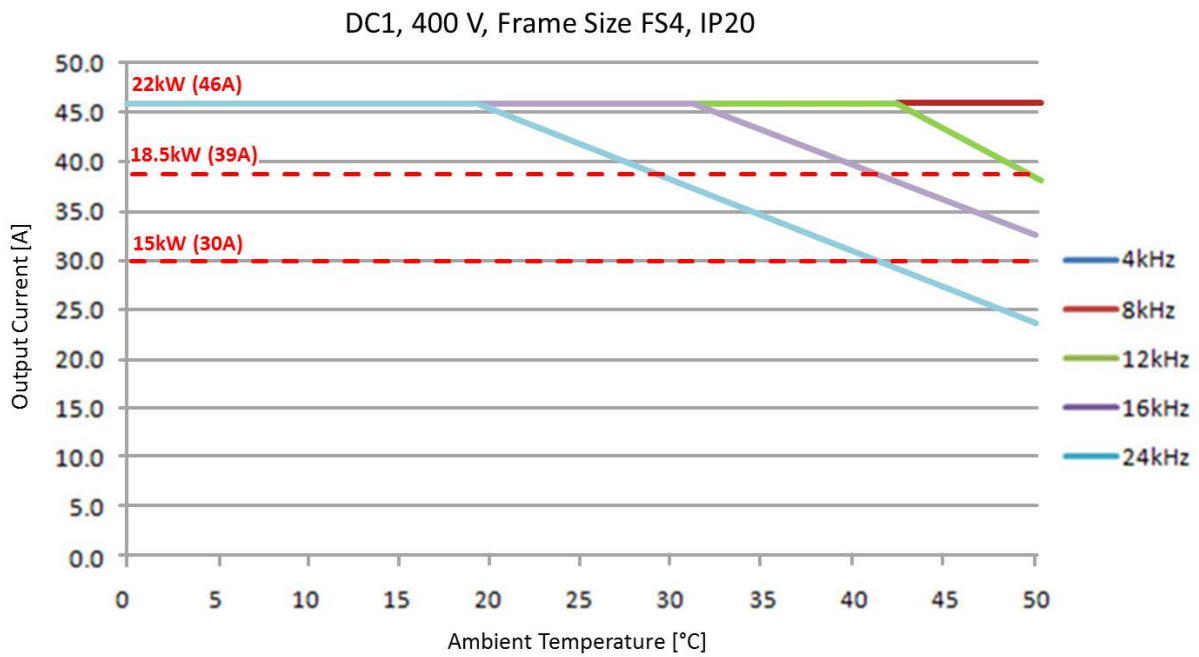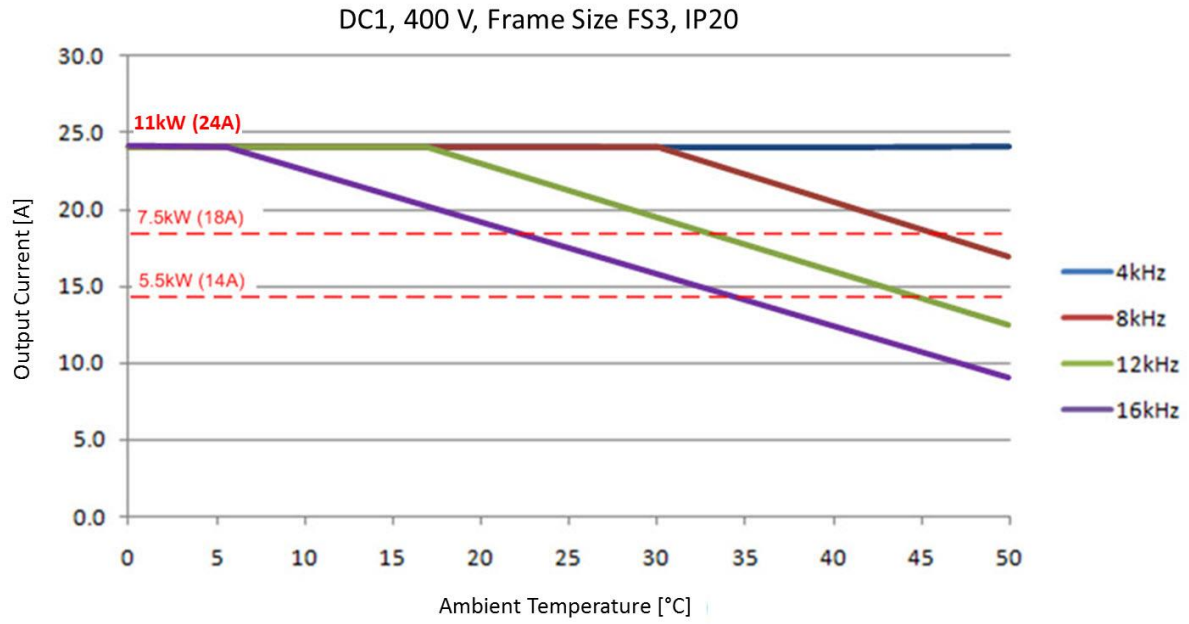

### 3.2 Devices DC1 with degree of protection IP66

#### 3.2.1 Voltage class 230 V

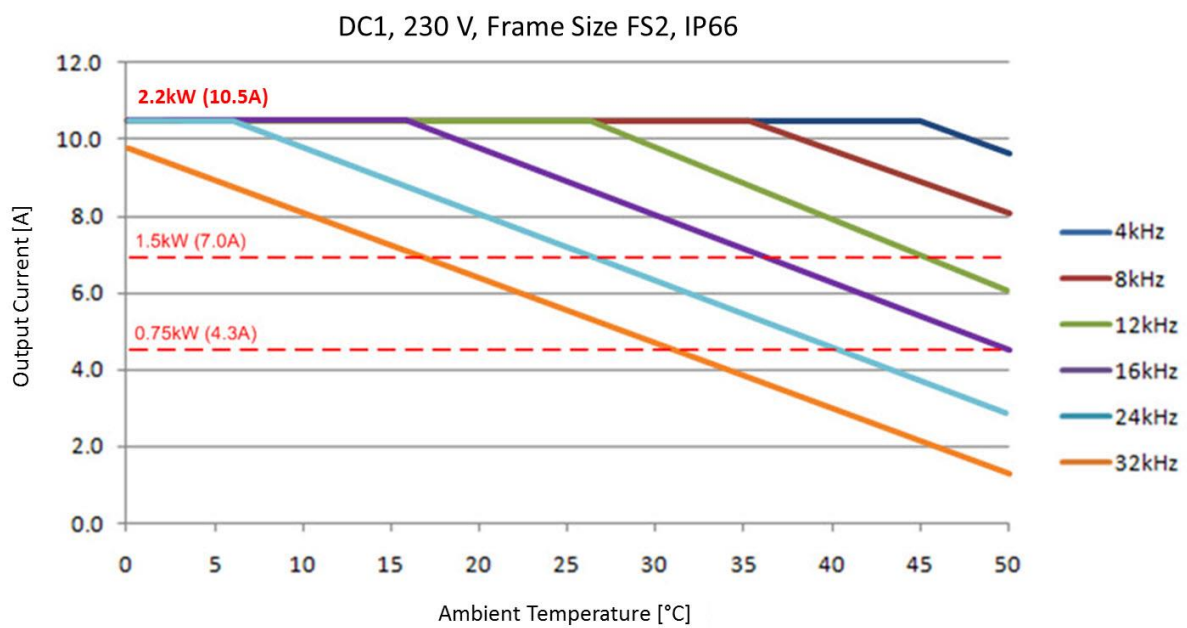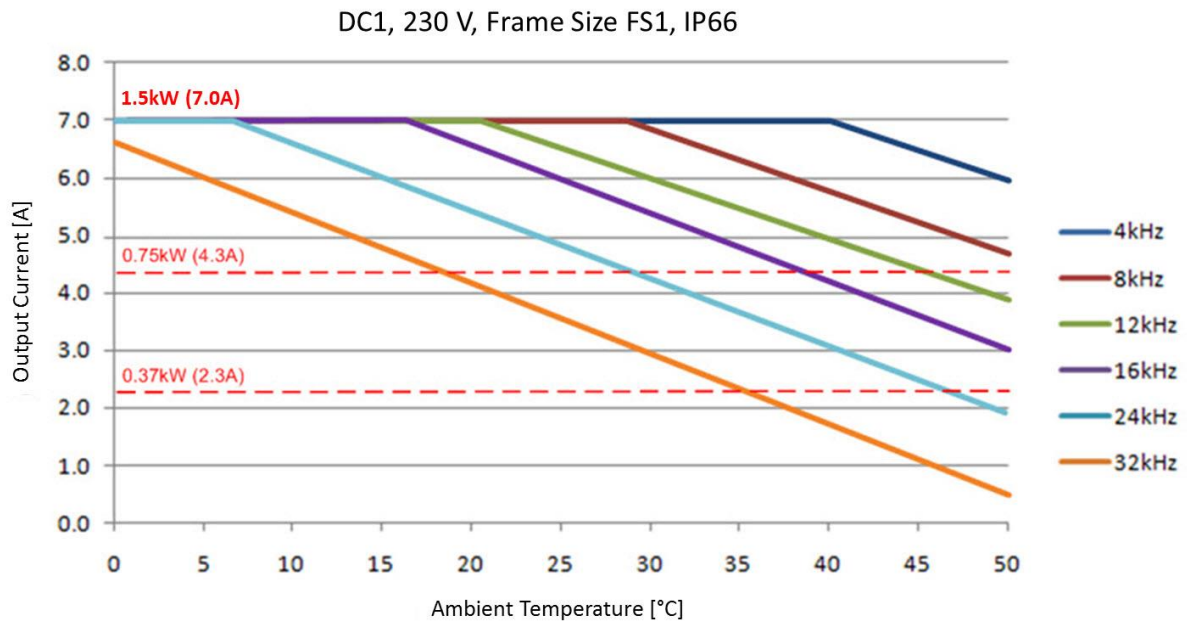

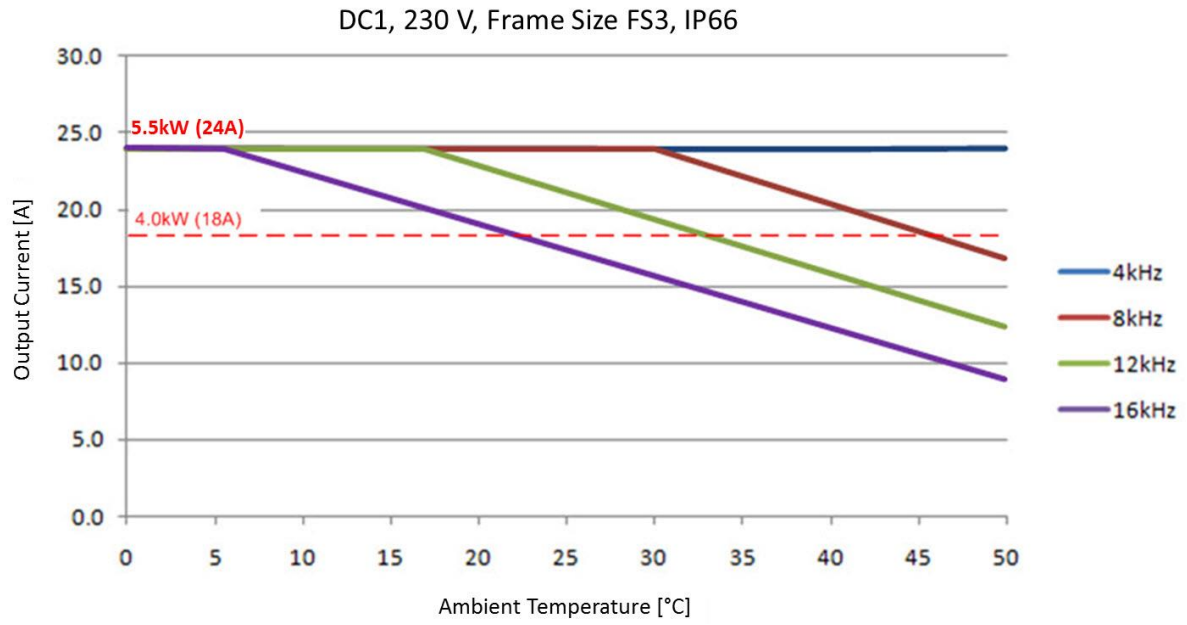

### 3.2.2 Voltage class 400 V

